

HOW TO MEASURE FOR YOUR UNIVEST® INSULATION JACKET

Selecting the right size UniVest® Insulation Jacket for your machine is a lot easier than you might think. All you need is a tape measure, and you are ready to go!


WARNING: When installing or measuring for UniVest®, please follow all safety precautions and use proper and adequate protective safety aids such as: protective gloves and suitable protective clothing. Keep all metal objects away from heater bands. Never use a metal tape for measuring purposes. Failure to do so may result in injury.

1. MEASURE FOR EITHER THE (1) CIRCUMFERENCE OR (2) DIAMETER:



CIRCUMFERENCE


OR

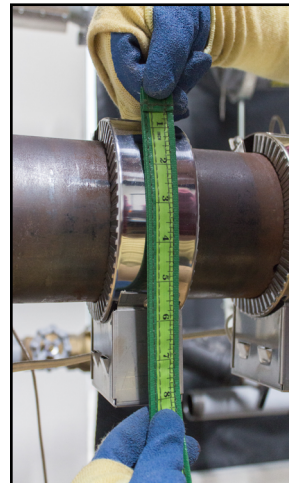

DIAMETER

NOTE: It does not matter which method of measurement you decide to use. Just remember that you only need to find your measurement using one of the two ways described above.

2. MEASURE FOR THE DESIRED WIDTH:

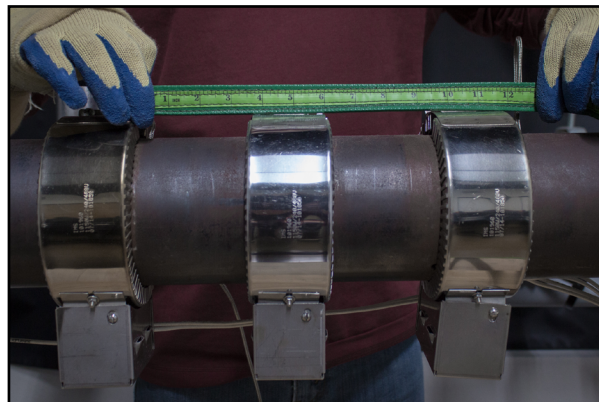

WIDTH

NOTE: After finding either the circumference or diameter, measure for the desired width to determine the width measurement of the application you want to insulate.

3. FIND THE RIGHT UNIVEST® INSULATION JACKET:

The **CIRCUMFERENCE** (length) is 25in and the desired width is 12in = **UVST 3112**.

FOR EXAMPLE: **OR**

The **DIAMETER** (length) is 8in and the desired width is 12in = **UVST 3112**.

WIDTH

CIRCUMFERENCE	DIAMETER	2in (51mm)	4in (102mm)	5in (127mm)	6in (152mm)	8in (203mm)	10in (254mm)	12in (305mm)	14in (356mm)	16in (406mm)
0in-6in (0mm-152mm)	0in-2in (0mm-51mm)	UVST 1302	UVST 1304	UVST 1305	UVST 1306	UVST 1308	UVST 1310	UVST 1312	UVST 1314	UVST 1316
6in-13in (152mm-330mm)	2in-4in (51mm-120mm)	UVST 1902	UVST 1904	UVST 1905	UVST 1906	UVST 1908	UVST 1910	UVST 1912	UVST 1914	UVST 1916
13in-19in (330mm-483mm)	4in-6in (120mm-152mm)	UVST 2502	UVST 2504	UVST 2505	UVST 2506	UVST 2508	UVST 2510	UVST 2512	UVST 2514	UVST 2516
19in-25in (483mm-635mm)	6in-8in (152mm-203mm)	UVST 3102	UVST 3104	UVST 3105	UVST 3106	UVST 3108	UVST 3110	UVST 3112	UVST 3114	UVST 3116
25in-31in (635mm-787mm)	8in-10in (203mm-254mm)	UVST 3802	UVST 3804	UVST 3805	UVST 3806	UVST 3808	UVST 3810	UVST 3812	UVST 3814	UVST 3816
31in-38in (787mm-965mm)	10in-12in (254mm-305mm)	UVST 4302	UVST 4304	UVST 4305	UVST 4306	UVST 4308	UVST 4310	UVST 4312	UVST 4314	UVST 4316
38in-44in (965mm-1118mm)	12in-14in (305mm-356mm)	UVST 5002	UVST 5004	UVST 5005	UVST 5006	UVST 5008	UVST 5010	UVST 5012	UVST 5014	UVST 5016
44in-50in (1118mm-1270mm)	14in-16in (356mm-406mm)	UVST 5602	UVST 5604	UVST 5605	UVST 5606	UVST 5608	UVST 5610	UVST 5612	UVST 5614	UVST 5616
50in-57in (1270mm-1448mm)	16in-18in (406mm-457mm)	UVST 6302	UVST 6304	UVST 6305	UVST 6306	UVST 6308	UVST 6310	UVST 6312	UVST 6314	UVST 6316
57in-63in (1448mm-1600mm)	18in-20in (457mm-508mm)	UVST 6802	UVST 6804	UVST 6805	UVST 6806	UVST 6808	UVST 6810	UVST 6812	UVST 6814	UVST 6816

NOTE: Now that you have your measurements, you can use the graph above to help you find the appropriate UniVest® Insulation Jacket part number. Diameter and circumference (length) measurements are listed in the table rows vertically and width measurements are listed in the column rows horizontally.

4. GO AND ORDER ONLINE:

1. Go to shop.unitherm.com
2. Enter your part number in to the Search bar in the upper left-hand corner of the page
3. Click **“Search”** to get your UniVest® Insulation Jacket