

HOW TO INSTALL ISOCOVERS INSULATION SYSTEMS

Installing your ISOCOVERS Insulation Jacket to your selected application is very simple and much easier than you might think.

WARNING: When installing or measuring for ISOCOVERS, please follow all safety precautions and use proper and adequate protective safety aids such as: protective gloves and suitable protective clothing. Never use a metal tape for measuring purposes. Failure to do so may result in injury.



TOOLS NEEDED: WIRE CUTTERS, LACING WIRE, PLIERS & SAFETY GEAR

1. WRAP THE ISOCOVERS INSULATION JACKET AROUND THE APPLICATION YOU WISH TO INSULATE AND PULL THE DRAW CORDS TIGHT:






2. TIE THE DRAW CORDS TOGETHER TO GIVE IT A SECURE FIT: (DO NOT OVER-TIGHTEN)




3. PULL OUT A SUFFICIENT AMOUNT OF SS WIRE AND TWIST THE END OF IT INTO A LOOP. TRIM THE SS WIRE AT THE BASE OF THE CYLINDER AND ATTACH IT TO AN SS LACING HOOK ON THE ISOCOVERS INSULATION JACKET:

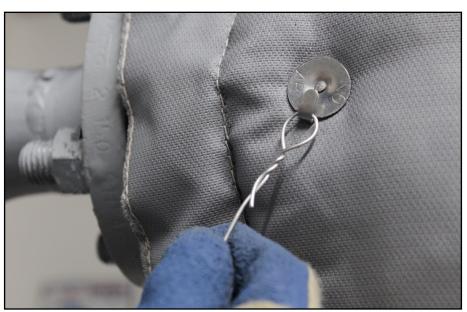



4. SECURE THE ISOCOVERS INSULATION JACKET BY LACING THE SS WIRE BACK AND FORTH BETWEEN THE SS LACING HOOKS:

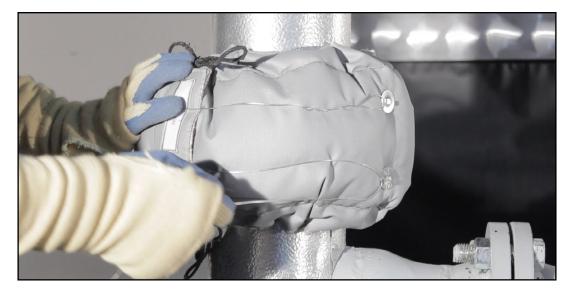

5. TRIM OFF ANY REMAINING SS WIRE USING THE WIRE-CUTTING PLIERS, ONCE YOU HAVE FINISHED LACING IT AROUND THE ISOCOVERS INSULATION JACKET.



ONCE THE SS WIRE HAS BEEN TRIMMED, YOU ARE READY TO START INSULATING!